



MGP REAR SETS - BMW S1000RR 2015-16

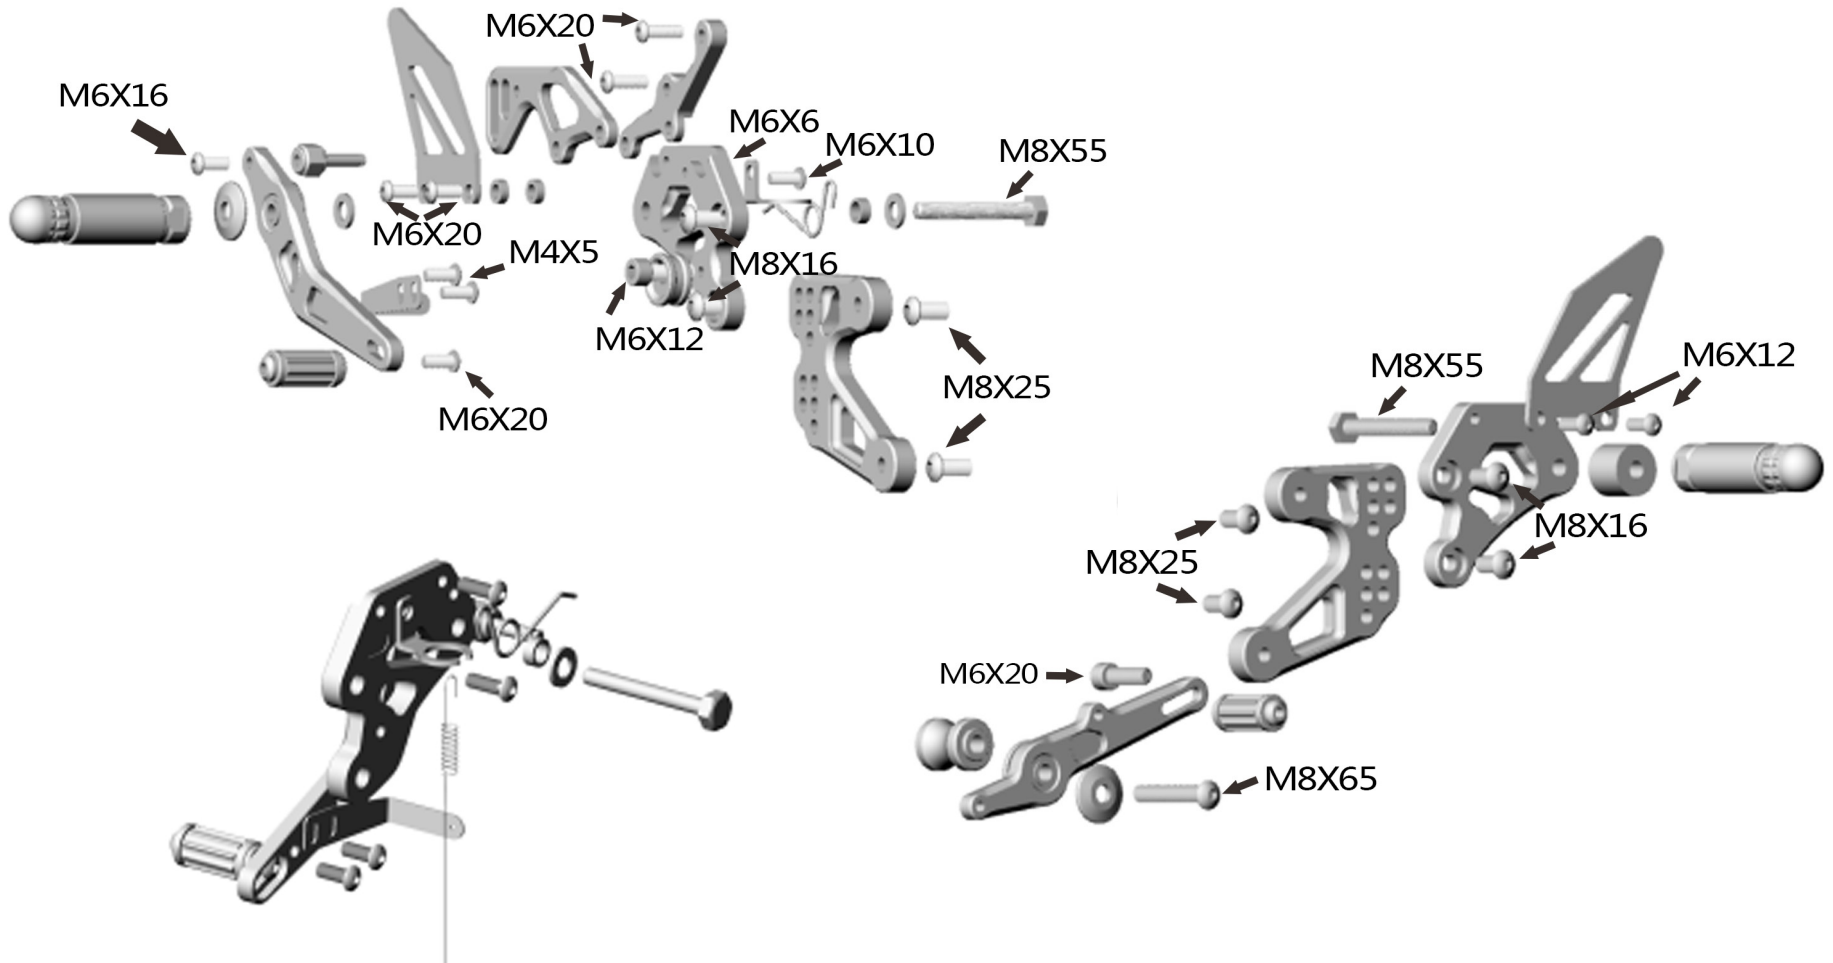

! REMOVE PRE-ASSEMBLY O-RINGS BEFORE INSTALLING

! APPLY LOCKTIGHT TO ALL MOUNTING FASTENERS

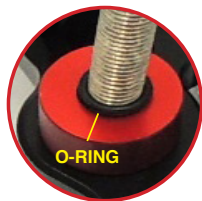

UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES .XX = ±0- .XXX = ±00- XXXX = ±000-		NAME	DATE	MGP <small>MOTORCYCLE</small>
CHECKED	✓	Bruce B.	05/01/15	
APPROVED		Jeremy T.	05/02/15	
SURFACE FINISH			05/03/15	TITLE
DO NOT SCALE DRAWING				BMW S1000RR 2015-16 REAR SETS
BREAK ALL SHARP EDGES AND REMOVE BURRS				SIZE
THIRD ANGLE PROJECTION		MATERIAL	FINISH	DWG NO.
		ALUMINUM	ANODIZED	21501-2500
		SCALE	WEIGHT	SHEET
				1 of 1
				REV. B