


HOTBODIES RACING.COM

GSX-R UNDERTAILS

**(GSX-R1000 05-06', GSX-R600/750 06-07',
GSX-R1000 07-08', GSX-R 600/750 08-09')**

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS!

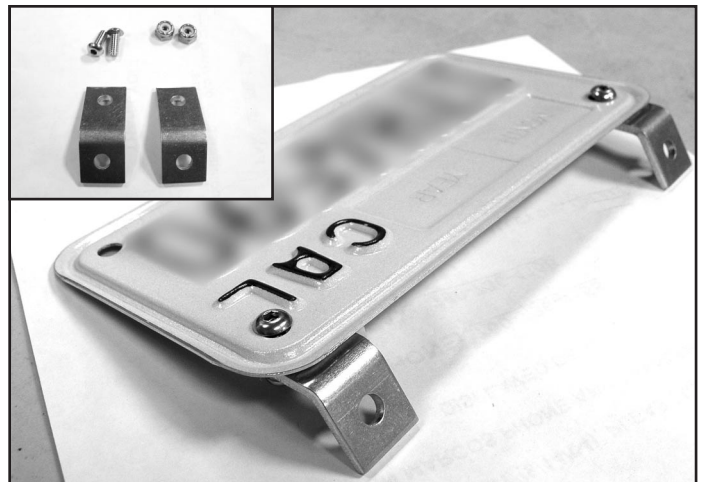

1) Remove stock mudflap from inside glovebox. Remove stock undertail by taking out "Pop Rivets". To remove "Pop Rivets", push center in, then pull the "Pop Rivet" out.

2) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on new undertail (behind the signals) carefully mark and drill holes, install using the two (2) sets of bolts & nuts.

3) Splice your stock license plate light wires to the wires on Hotbodies undertail. On the bike; the gray wire is the the positive which connects to the red wire on undertail, black with white tracer is the negative which connects with the black wire on the undertail.

** After this modification your undertail is not returnable. Paint is not warrantied against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.*



4) Install undertail left side first, then right side, the same as the stock undertail, using stock "Pop Rivets". Be careful not to crack or scratch undertail. Tighten all hardware on tail section. Your done!

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.