



HOTBODIES
RACING.COM

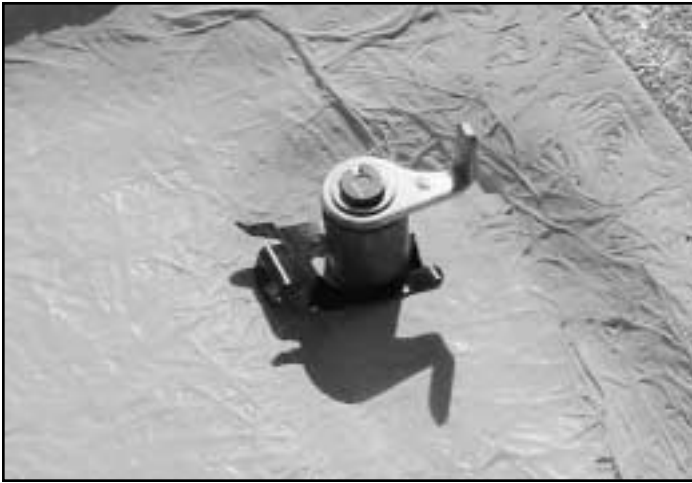

3) Insert Key lock into position as shown.

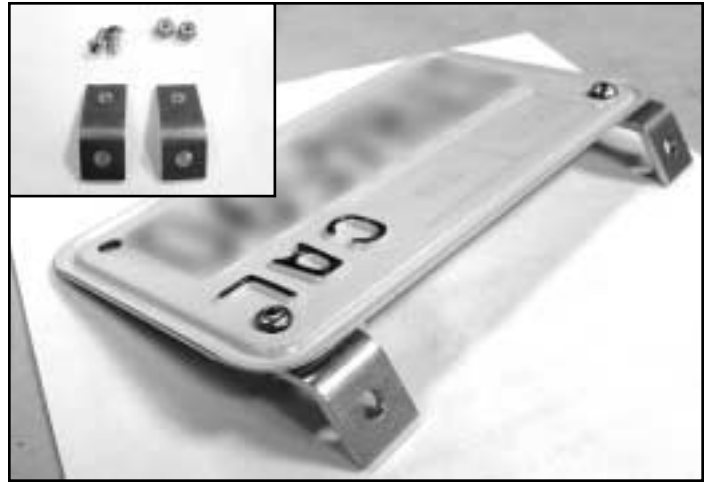

4) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail, carefully mark and drill holes, install using the two (2) sets of allen bolts and lock nuts.



5) Re-mount glove box to bike using stock hardware. Replace tail section, do not use any fasteners until undertail is in place. Insert undertail left side first, then right side, be carefully not to crack or scratch undertail. Tighten light first, then all other bodywork mounting locations, then insert 2 screw rivets into stock locations into undertail.



6) Check Lock position, adjust if necessary. Your done.

** After this modification your undertail is not returnable. Paint is not warrantied against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.*