

HOTBODIES RACING.COM

Honda CBRF4i SBK Undertail Kit


(2004-06, Available in: Black, Blue, Red, Silver, and Yellow)

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!

- 1) Carefully remove the tail section body work. Save all bolts, washers and plastic rivets for re-installation of tail. Disconnect and remove the brake light (with all mounting grommets and washers), license plate and turn signals, key lock (with clip) and move all wiring out of the cutting areas. Remove the two bolts at the rear end of the stock fender (inside glovebox) to allow the end to hang down for cutting.



- 2) Using a "Dremel" tool or cutting disc (this can also be done using a sharp edged knife, but is not recommended), remove the plastic shown in the photos to the above. Your subframe may be different but the cutting position is the same on all years. Be sure to take your time cutting, so that you don't cut away any more plastic than necessary. Trim off the back portion of your glove box, but make sure to leave the sub-frame mounting tabs connected. After cutting it is a good idea to test the fitment of the undertail. If the undertail is not fitting properly you may need to check your position and cut a little more. Remember cutting less is always better!!!

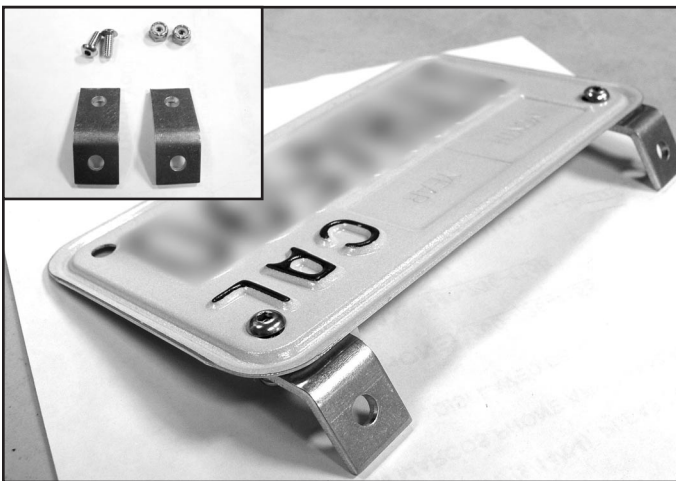

- 3) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail, carefully mark and drill holes, install using the two (2) sets of allen bolts and lock nuts.



- 4) Re-attach glovebox, replace all bodywork with fasteners loosely installed. Install undertail left side first, then right side, be careful not to scratch, or crack undertail. Use plastic screw rivets to hold undertail in place. Insert lock into undertail using stock lock mounting clip, make sure the lock is in the correct position with the lock cable arm to function properly.

WIRING INSTRUCTIONS:

Connect the right (blue wire) and left signal (orange wire) wires on the bike, to the respective right/left red wires on the undertail. Connect the ground wires (green) to the black wires on the undertail. Your done!

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.