



HOTBODIES RACING.COM

Kawasaki ZX10R Undertail Kit

(2006-07, Available in: Black, Blue, Green, Yellow, and Red)

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!

- 1) Carefully remove the tail section body work and mufflers. Save all bolts, washers and plastic rivets for re-installation of tail. Disconnect and remove the brake light (with all mounting grommets and washers), license plate and turn signals, key lock (with clip) and move all wiring out of the cutting areas.

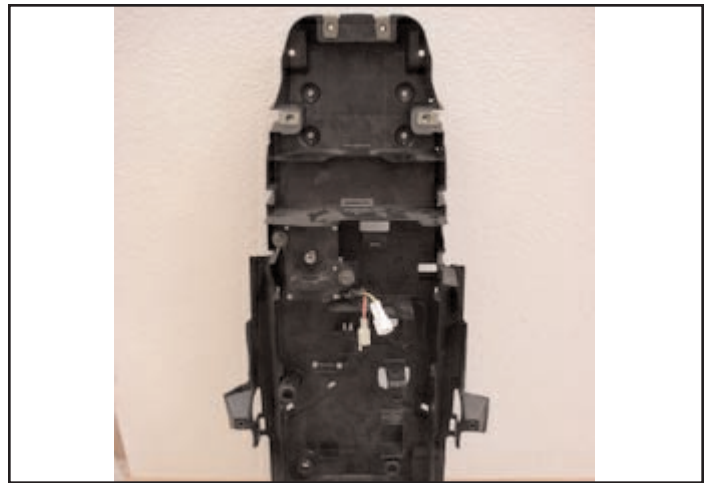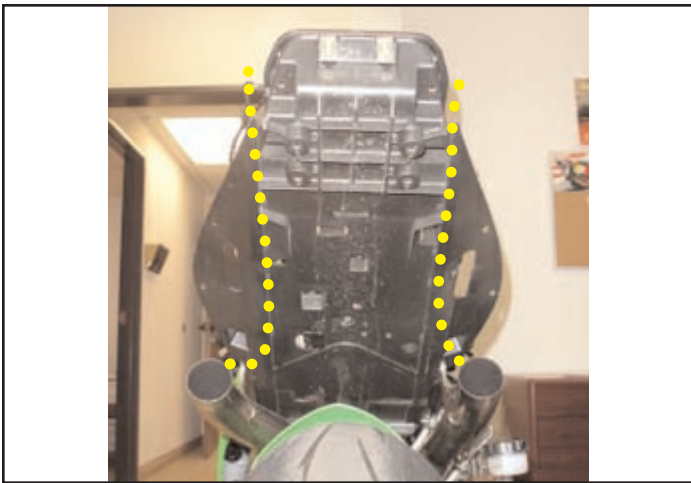

- 2) Using a "Dremel" tool or cutting disc (this can also be done using a sharp edged knife, but is not recommended), remove the plastic shown in the photos above and below. Be sure to take your time cutting, so that you don't cut away any more plastic than necessary.



- 3) Carefully cut around the battery box mounting points and leave them attached



- 4) Replace all bodywork with fasteners loosely installed, mount undertail, be sure to have battery box bolts on both sides mounted through the undertail, battery box and then in to frame. Notice at bottom of the tray there are 2 holes, mark and drill holes in undertail

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



5) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail, carefully mark and drill holes, install using the two (2) sets of allen bolts and lock nuts.



6) To incorporate passenger pegs, mark and drill out passenger peg holes on undertail.



7) Tighten all hardware on tail section, attach seat. You're Done!

*Note picture above does not have passenger peg hole drilled out.

WIRING INSTRUCTIONS:

To connect the license plate light; use the stock black and yellow tracer wires with black undertail wire and stock red with red undertail wire.

** After drilling or modifying your undertail is not returnable. Paint is not warranted against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.*