

HOTBODIES RACING.COM

Yamaha YZF-R1 Undertail Kit


(2002-03, Available in: Yamaha Red, Yamaha Blue, Yamaha Silver and Gloss Black)

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!

- 1) Carefully remove the tail section body work. Save all bolts, washers and plastic rivets for re-installation of tail. Disconnect and remove the brake light (with all mounting grommets and washers), license plate and turn signals and move all wiring out of the cutting areas. Remove the two bolts at the rear end of the stock fender (inside glove box) to allow the end to hang down for cutting.



- 2) Using a "Dremel" tool or cutting disc (this can also be done using a sharp edged knife, but is not recommended), remove the plastic shown in the photos above and below. Be sure to take your time cutting, so that you don't cut away any more plastic than necessary.

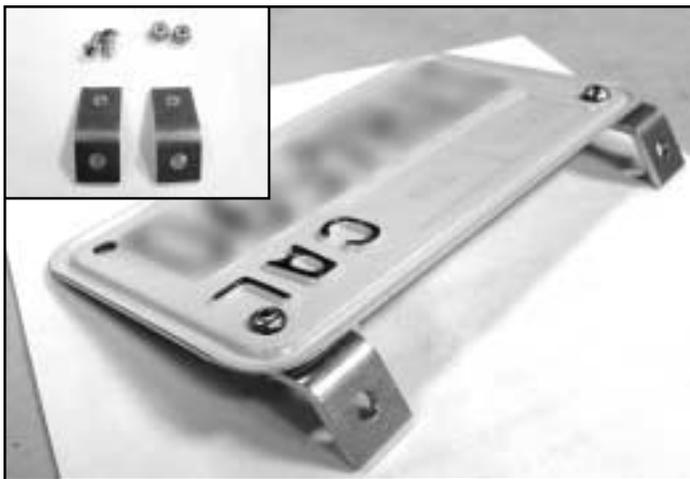

- 3) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail (under the signals), carefully mark and drill holes, install using the two (2) sets of bolts & nuts.

- 4) Re-install stock tail section, insert undertail left side first, then right side the same as the stock undertail. Make sure the key locks on the sides are firmly locked into the tail section, be careful not to crack or scratch undertail. Use your stock plastic screw rivets to hold undertail in place, start from the top and work your way to the bottom. Tighten all hardware on tail section, attach seat. Your done!

WIRING INSTRUCTIONS:

Using clips, splice your turn signal wires to the signals in the undertail. On the bike; the brown wire is the the left turn, dark green wire is the right turn and the black wires are the grounds. On the undertail the red wires are the power wires and the black wires are the grounds.

** After this modification your undertail is not returnable. Paint is not warrantied against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.*

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.