



## 2003-11 SUZUKI SV650

### Carefully read instructions in their entirety before the install

Professional installation is recommended. Always use proper safety measures during the install of this product. Do not try to install this product without proper tools, recently calibrated torque wrench, correct torque specifications from factory service manual, safety goggles and gloves. The motorcycle must be in a fixed secure position before the install process begins. Hotbodies Racing is not responsible for any damage to your motorcycle for any reason during the installation or use of this product!




### Installation Steps:

**DO NOT remove both engine studs at the same time.**

\*\* Frame Sliders: Right frame slider longer than Left

1. Locate and remove left OEM engine stud.
2. Mount left side frame slider left side bell spacer using Socket Cap 10 X 1.25 X 110 Main Engine Stud supplied in kit and torque down to OEM torque specs. Note: Small end of bell spacer goes into the frame counter bore.
3. Remove the right side OEM motor mount bolt.
4. Mount Right side frame slider using Socket Cap 10 X 1.25 X 140 Main Engine Stud supplied in kit and torque down to OEM torque specs.

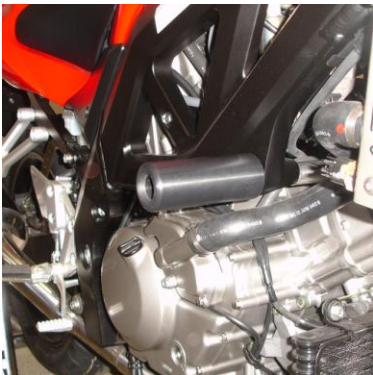

Hotbodies Racing frame sliders serve the purpose of mitigating damage to the motorcycle. Although statistics have shown that frame sliders reduce damages to the frame, cases, swing arm, and levers there is no guarantee that this product will eliminate damage all together in the event of a crash.