# MGP REAR SETS - SUZUKI SV650 2017

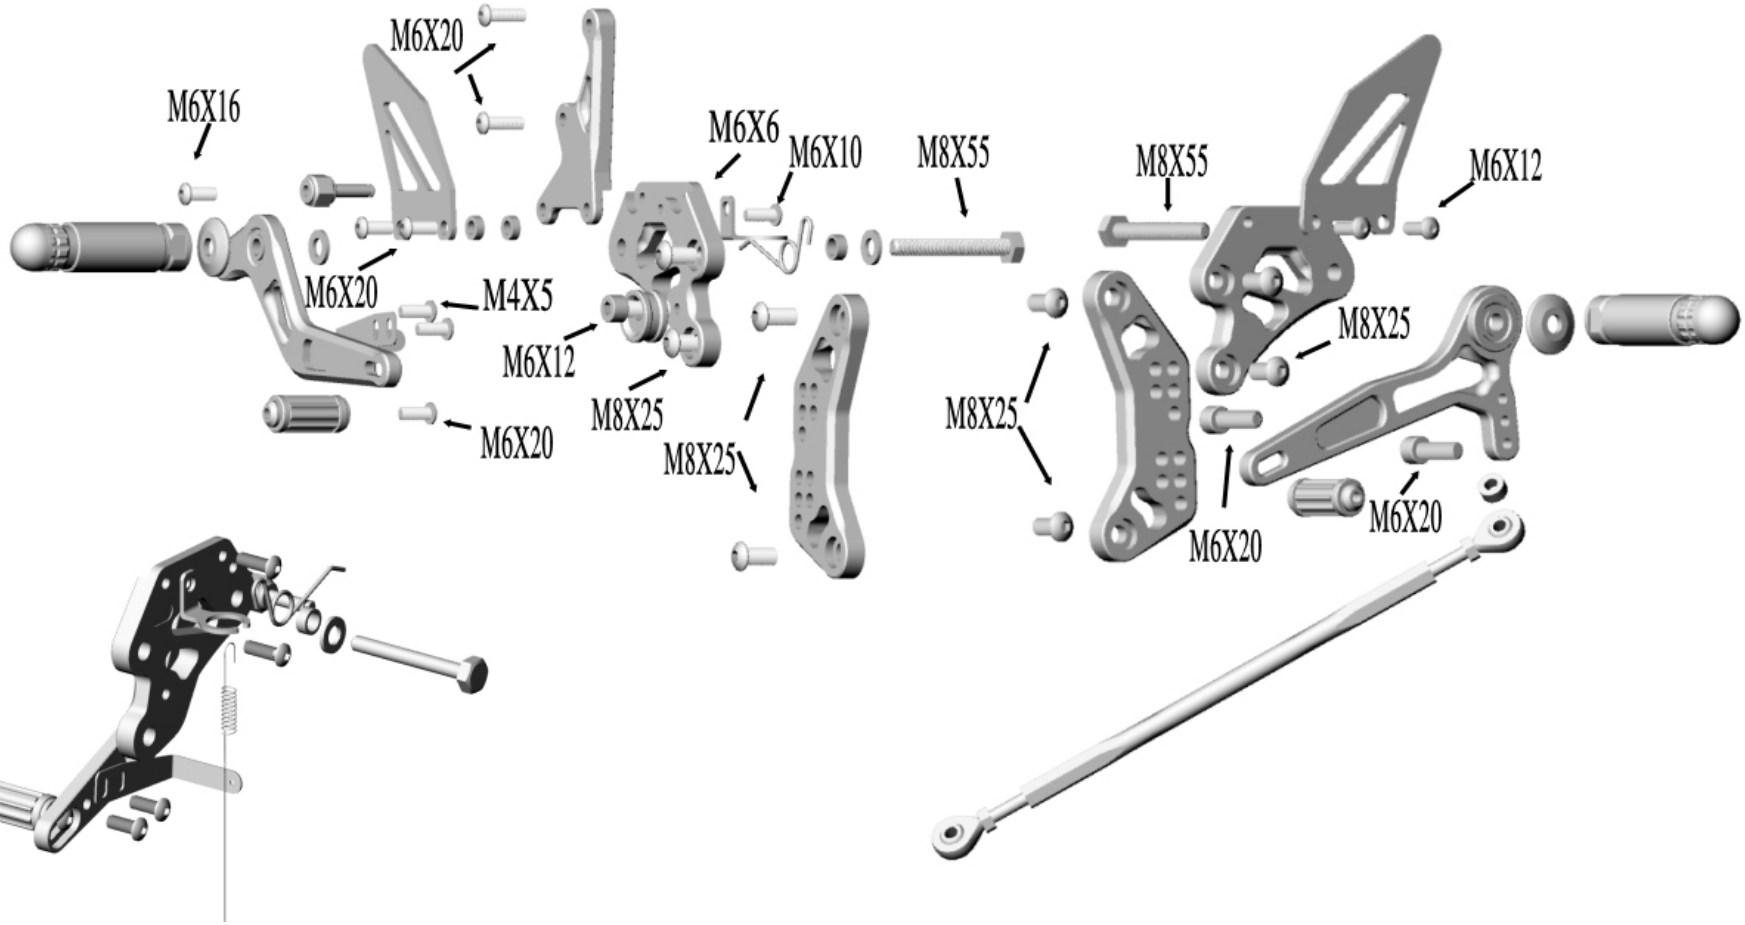




**REMOVE PRE-ASSEMBLY O-RINGS BEFORE INSTALLING**

**APPLY LOCKTIGHT TO ALL MOUNTING FASTENERS**

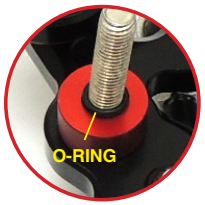


| | | NAME | DATE |
|---|---|---|---|
| UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES .XX = ±.0- .XXX = ±.00- .XXXX = ±.000- ANGULAR∠ = ± ° FRACTIONAL = ± SURFACE FINISH √ | DRAWN | Bruce B. | 01/13/17 |
| | CHECKED | Jeremy T. | 02/14/17 |
| | APPROVED | Roger D. | 03/17/17 |
| DO NOT SCALE DRAWING | | | |
| BREAK ALL SHARP EDGES AND REMOVE BURRS | | | |
| THIRD ANGLE PROJECTION | MATERIAL: ALUMINUM | FINISH: ANODIZED | |

TITLE
SUZUKI SV650 2017
REAR SETS

| SIZE | DWG NO. | REV. |
|---|---|---|
| | 61702-2500 | B |
| SCALE | WEIGHT | SHEET 1 of 1 |